



COMMERCIAL

VCS-01 User Guide



Vax Commercial Careline: (UK) 0844 375 4275
vaxcommercial.co.uk

VCS-01

Performance is everything.™

Machine Overview


- 1 Upper metal handle
- 2 Lower metal tube
- 3 Handle position dials
- 4 Dirt container
- 5 Brush height adjust dial
- 6 Dirt container handle
- 7 Dirt container release button
- 8 Sweeper brushes
- 9 Wall guides




Assembly

PLEASE READ SAFETY INFORMATION BEFORE USE (PAGE 8)


Assembling your sweeper

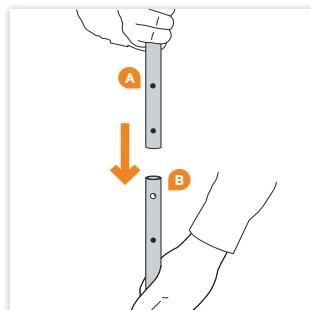


Slide metal handle (A) over lower metal tubes (B). Press button and slide lower tube into upper handle until the button snaps into place. There are 5 height settings.

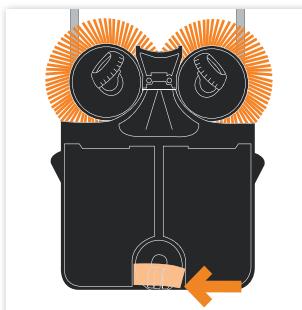


Remove tape from the caster wheel on the bottom of unit.

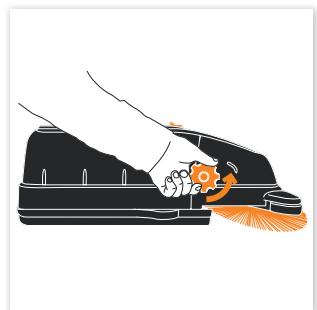

Unscrew the dial located on each side of the machine.

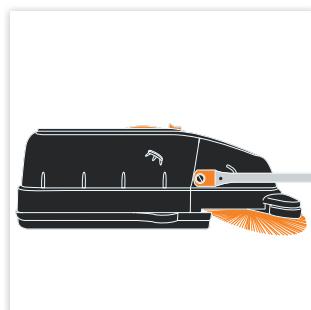

Align holes in the lower tube to the screw posts.

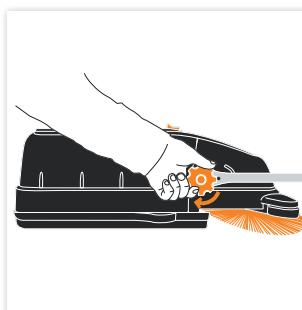


Reattach dials and screw until secure.

Operation

Brushes and wall guides



The brushes rotate and sweep up debris when the sweeper is pushed forward. The brushes do not rotate when the machine is pulled backwards.

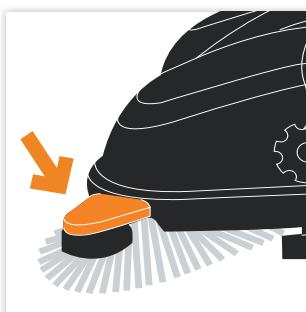

Wall guides are provided to aid sweeping close to edges by guiding either side of the sweeper along walls.



NOTE: For best results, push the sweeper at a normal walking pace. (circa 5kph)



CAUTION: The sweeper is designed for use on hard, flat surfaces. It is not intended to be used for wet pick up, on lawns or carpet.

Adjusting the brush height



NOTE: If the sweeper is difficult to push on a surface, turn the height adjustment towards 'HIGH'.



Low brush position

For use on flatter surfaces and smaller debris.

- Turn the height adjust dial (A) towards 'LOW'
- The rear of the sweeper will rise




High brush position

For use on rougher surfaces and larger debris.


- Turn the height adjust dial (A) towards 'HIGH'
- The rear of the sweeper will lower

Maintenance


Emptying and storing

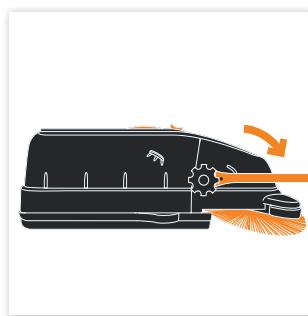


Push handle forward so it is no longer resting on the container.

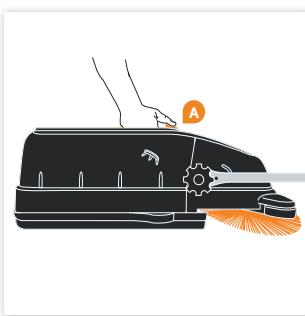

Slide container release (A) towards the rear of the sweeper.

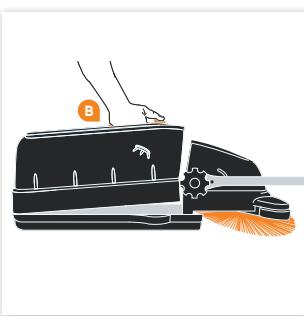

Lift handle (B), remove the container and empty.

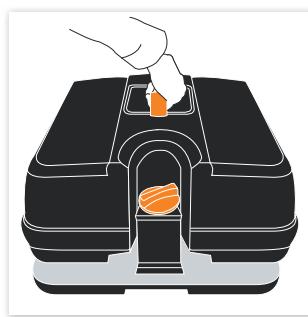

To replace container, align indent over the height adjust dial.
Lower container onto the sweeper until it snaps into place.



The sweeper can be stored upright or hanging in a dry place, out of direct sunlight.




NOTE: It is advised that you empty and clean the bin with warm water (40°C) and mild detergent before storage.

Maintenance


Cleaning sweeper brushes

To maintain peak performance, it is advised you regularly clean the sweeper brushes.

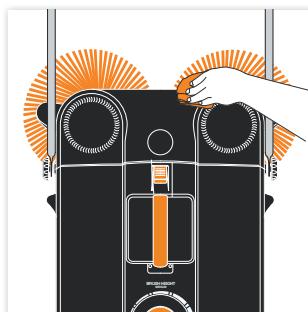


Front

Clean the top side of the brushes with a damp cloth.

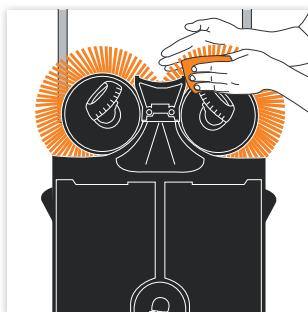

Back

Turn the unit over and clean the under side of the brushes.

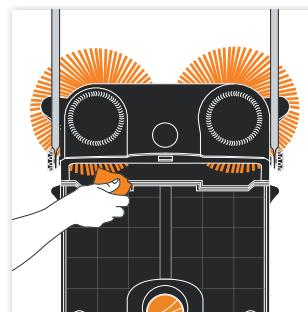

Inside

Remove the dirt container and clean the inside of the brushes.

Brushes can be cleaned with warm water (40°C) and mild detergent.



WARNING: Do not use high pressure water spray to clean the brushes.



NOTE: For spare or replacement parts, please call the Vax Commercial careline (0844 375 4275) or visit vaxcommercial.co.uk

FAQs

Why is debris being swept back onto surface during use?

- Light debris may have collected in the front of the dirt container, therefore tip the sweeper back to allow the debris to move to the back of the dirt container.

Why does the sweeper leave a line of debris?

- The sweeper is being pushed too slowly, try pushing the sweeper slightly faster.
- Try partially overlapping sweeping paths.

Why is the sweeper difficult to push?

- Surface is rough or uneven.
- Turn the brush height adjustment dial towards a higher setting.

Why is the sweeper not picking up debris?

- Lower the sweeper height for small debris.
- Raise the sweeper height for large debris.

Why won't the brushes turn?

- If the surface is uneven, turn the brush height adjustment dial toward a higher setting.
- If it is a high friction surface e.g. carpet, the sweeper will not function properly.

What do I do if the unit becomes damaged or broken?

- We're here to help. Simply call **0844 375 4275** or visit **vaxcommercial.co.uk**

General Safety Information

When using the sweeper, basic safety precautions should always be observed, including the following:

1. This appliance should be stored in dry and dark environments only.
2. Empty this appliance after each use.
3. Do not use this appliance for sweeping up liquids.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Do not use this appliance if it has been dropped or damaged.
Call 0844 375 4275 for advice and assistance.
6. Ensure airways remain clear of blockages during use for best performance.
7. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts. Do not operate this appliance in bare feet or when wearing open toe shoes or sandals.
8. Do not pick up hot, smoking, burning, flammable, hazardous or combustible materials or use in the presence of explosive liquids or vapours.
9. Do not sweep up harmful or toxic material (chlorine bleach, ammonia, drain cleaner, etc).
10. Do not use this appliance to sweep steps.
11. To avoid injury, wear safety gloves when removing glass, metal or similar material from dirt container.
12. Do not use the sweeper near heat sources such as fire, fan heaters, or other heat dissipating devices.
13. Do not use this appliance to sweep over electrical cords.
14. Use only this appliance as described in this manual.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Machine Overview

Service & Help

Vax Commercial Careline:
(UK) 0844 375 4275

Monday-Friday 8.30am to 6.30pm
Saturday-Sunday 9.00am to 5.00pm

Any queries or concerns about using your Vax, call the Vax Commercial Careline. Calls are charged at the UK local rate. Please make a note of the serial number and model number of the sweeper before calling. For the nearest Service Agent, please call the Vax Commercial Careline or visit vaxcommercial.co.uk

Technical Specification

Capacity:	25L
Weight:	7.3kg
Cleaning path:	46cm

Subject to technical change without notice.

 
Disposal

This product should not be disposed of with the house-hold waste. Please recycle where facilities exist.
Check with your Local Authority or retailer for recycling advice.



Notes

Notes



Vax Ltd., Kingswood Road, Hampton Lovett, Droitwich, Worcestershire, WR9 0QH, UK
email: info@vaxcommercial.co.uk website: vaxcommercial.co.uk

Version 1.0

Performance is everything.™